

# Stretch Fabric Media Wall

## Care Sheet

### Cleaning

We recommend that the Stretch Fabric Banner is cleaned regularly. To clean the fabric banner use a mild detergent in warm water with a soft mop or cloth. It is important to note that no solvents or abrasive cleaners should be used on any part of the fabric banner. To avoid the growth of mildew it is important that the fabric banner is completely dry before being packed away.

### Maintenance

Make sure that you assemble the Stretch Fabric Media Wall correctly in accordance with our assembly guide and that:

- All screws are intact and tight
- All poles have been inserted into the correct pole (with the same symbol)
- All poles have been clicked into the next pole correctly
- The banner has been zipped up at the bottom

### General Use

The Stretch Fabric Media Wall should not be used outdoors unless you have safely secured it to avoid it being blown over. They should not be used in windy conditions.

