


Crash/snap Mailer Box Assembly Guide

1 & 2 Bottles

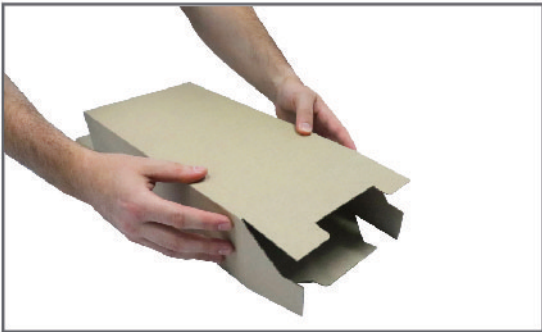

Step 1: Unfold the box so it is no longer flat




Step 2: Fold the large flap with the U shape inwards.



Step 3: Fold both the side flaps



Step 4: Fold the last flap and then push it back simultaneously with the U-shape flap until it snaps into the slot.

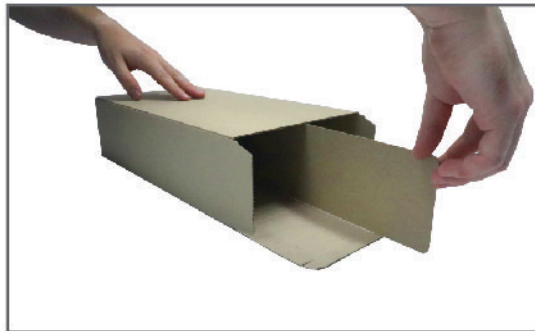

Step 5: Slide the insert in the middle



Step 6: Close the lid to complete the box